


1. Open the battery compartment
2. Disconnect the battery
3. •• Unscrew the 2 screws to open the upper part of the device
4. •• by uplifting the front lid



1. ●● Unscrew the 4 screws of the PCB
2. ●● disconnect the LED by pressing the two white clamps down and remove the wires



1. ●● 3 screws removed
one still left of the PCB
screws
2. ●● the LED wires are
disconnected
3. Carefully lift the PCB –
be **very careful**
because the foil cable
to the keypad is still
connected

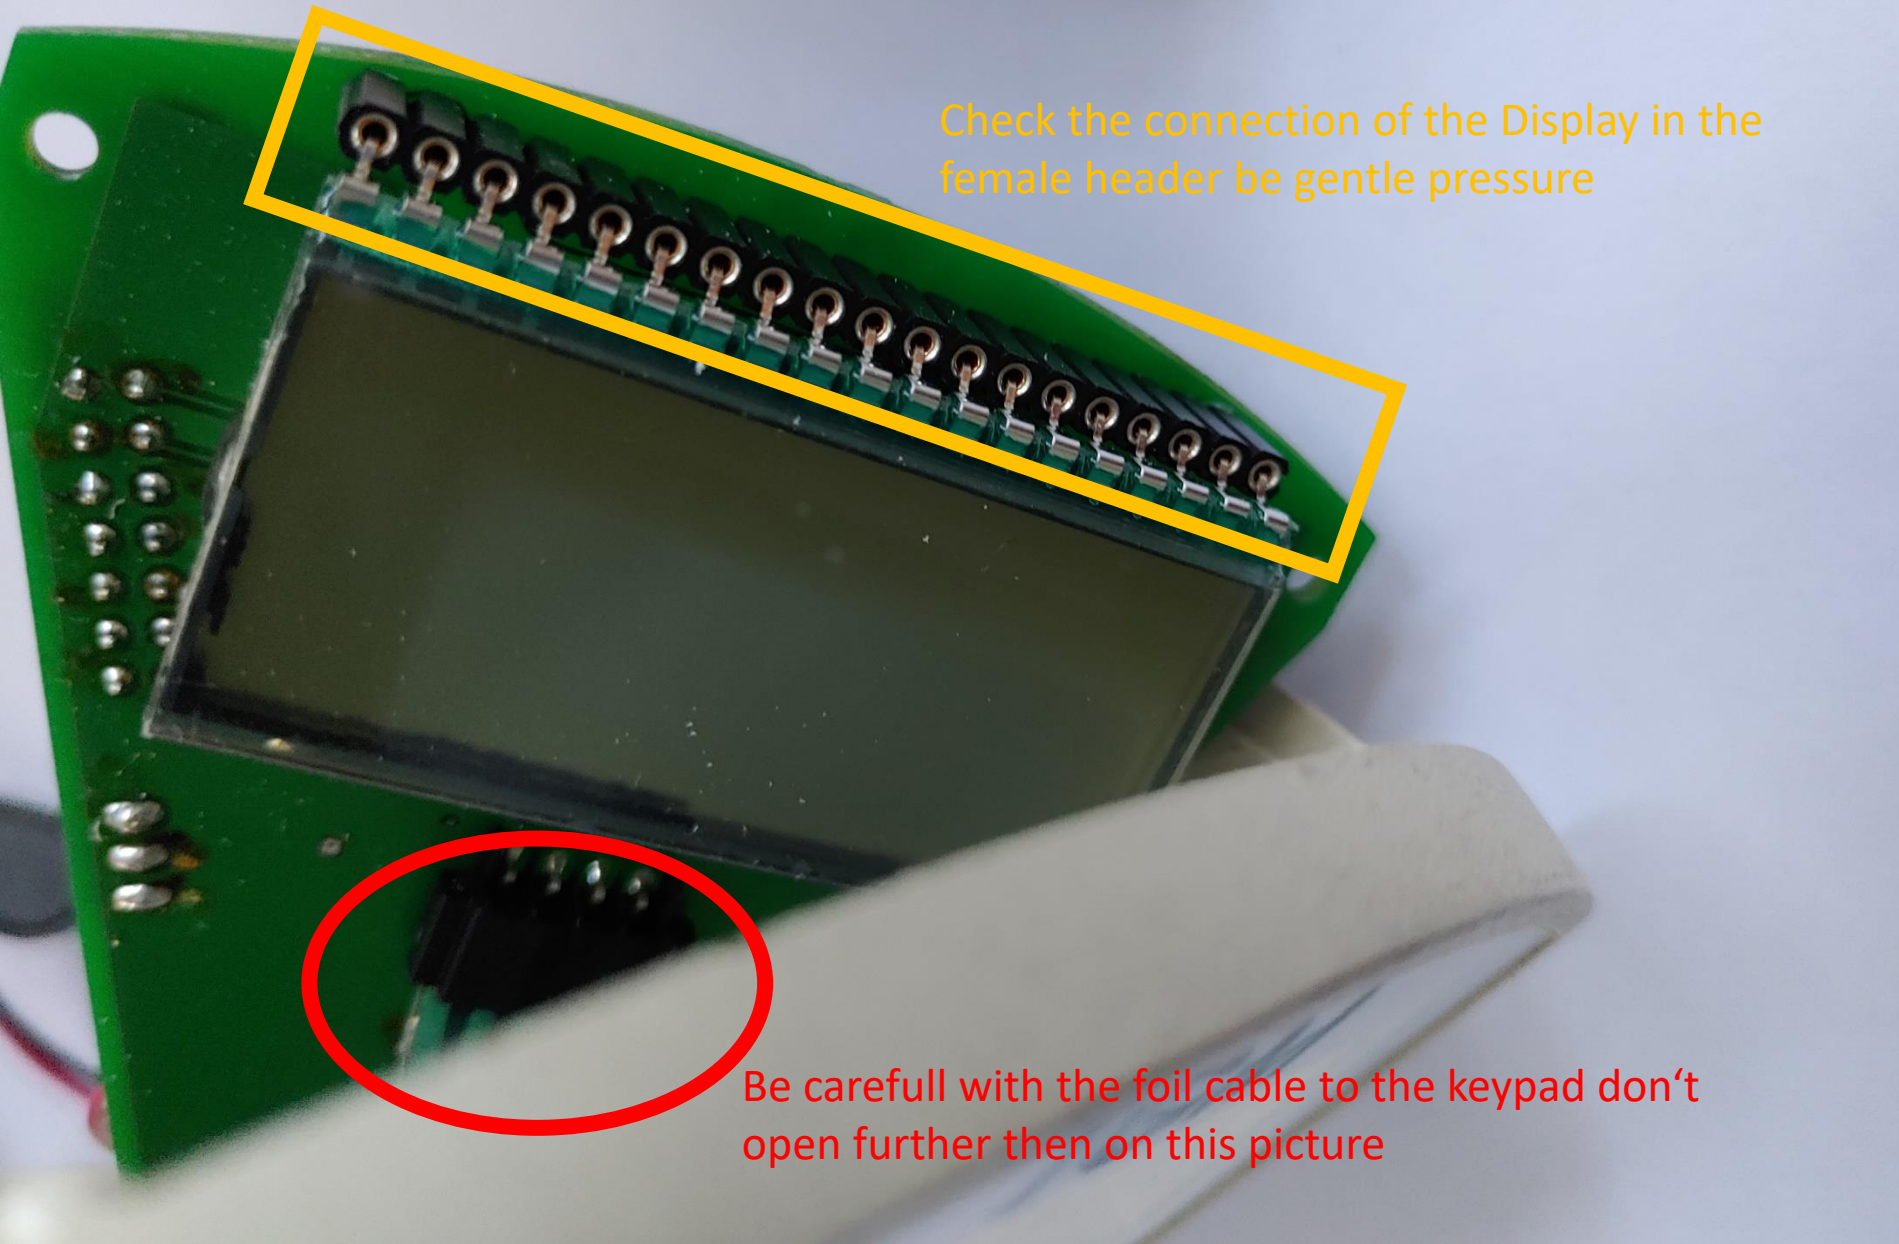

Check the connection of the Display in the female header be gentle pressure

1. ••Check the connection of the Display in the female header

Be carefull with the foil cable to the keypad don't open further then on this picture