


$$V (TGM-Speed) = \frac{L (Measuring Section)}{T (Duration)}$$

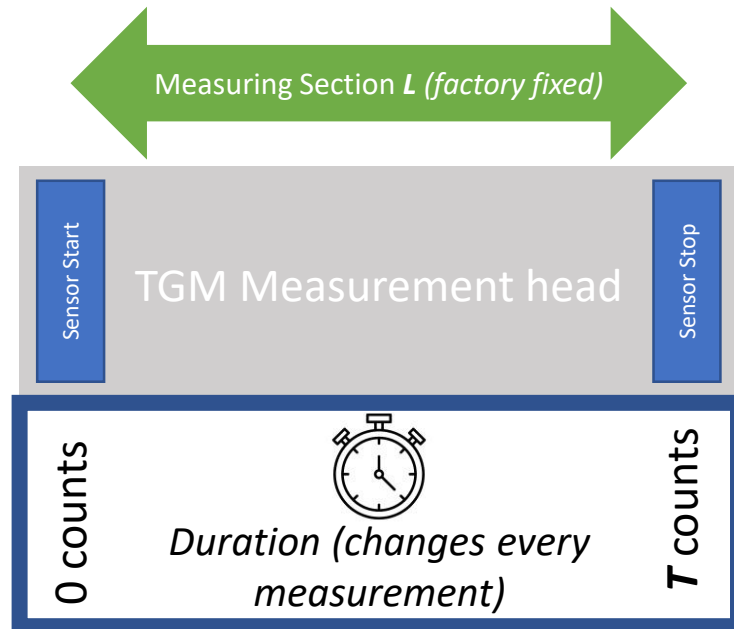

An Error of the measured Speed can occur if there is a mistake during the duration measurement (not likely) or the distance of the sensors changes (for example due to external force) – the flash saved distance is factory fixed before delivery and might be adjusted during calibration if necessary