



Measuring Head


Where is the cable problem? Where is the cable loose?

Measuring device



Measuring Head


To open the Measuring
Head unscrew the 4 screws

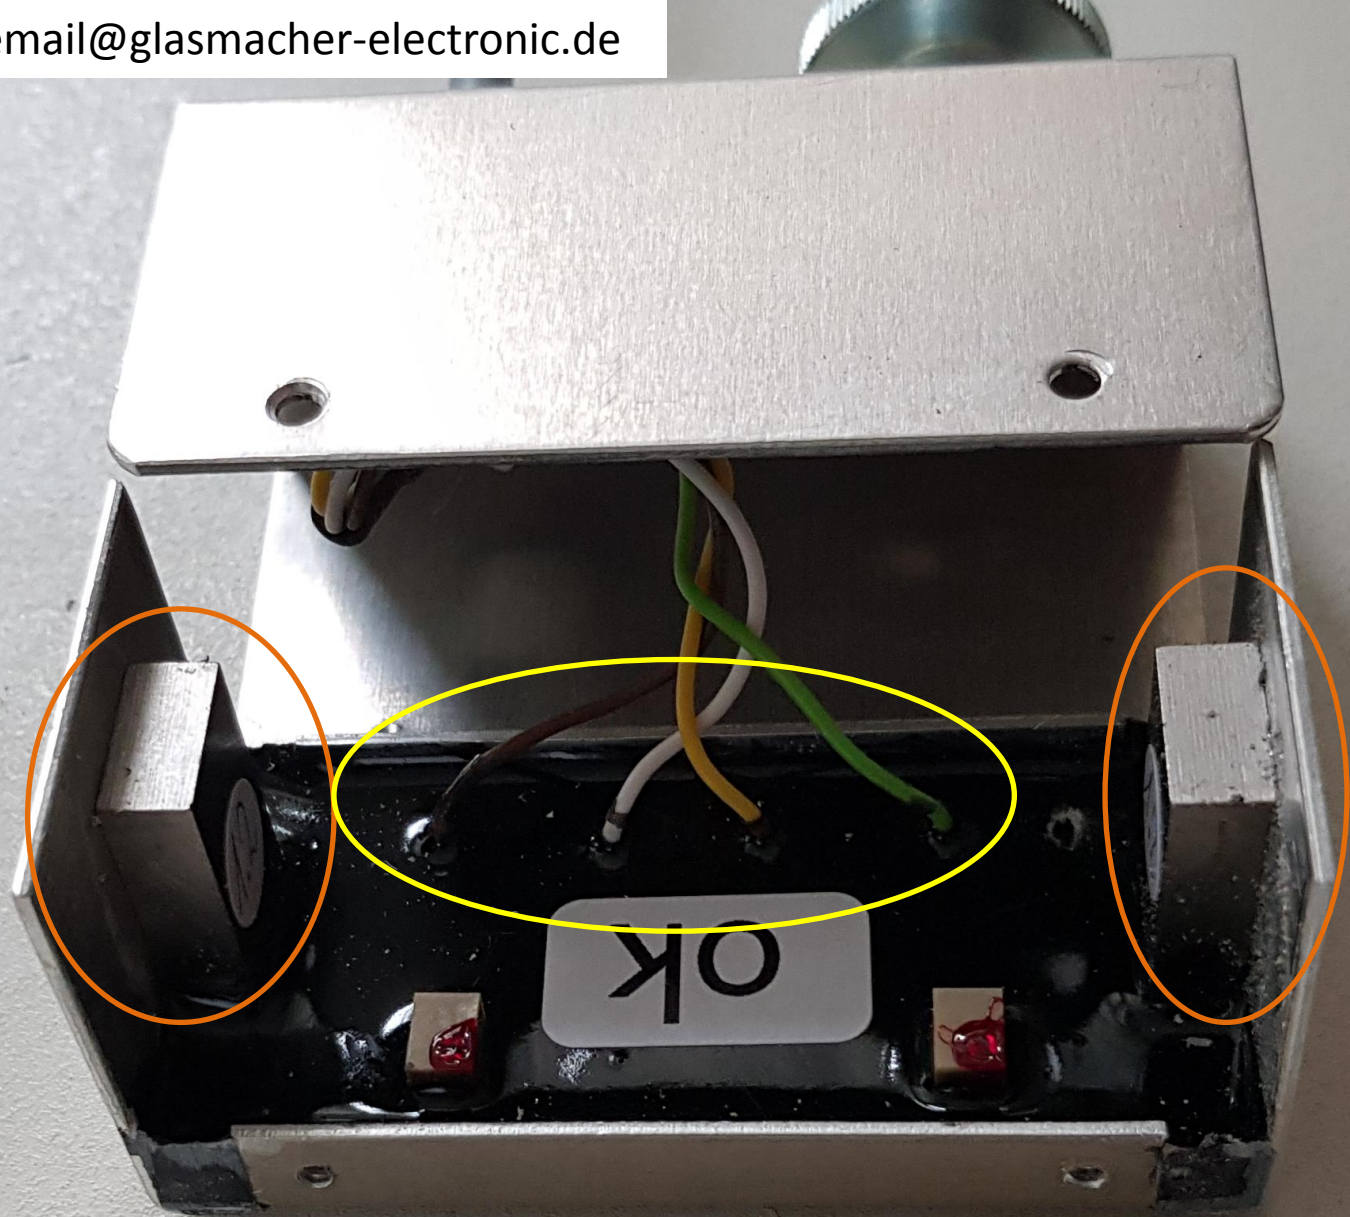

Check the **magnets** and the
Cable connections

Open the measuring device

- Check the terminal block: if you pushing the white lever down the cable is loose – please use ferrules or tin the stripped cable
- Check the cable grommet often the glue gets loose we recommend a special glue for TPE (for example Loctite)

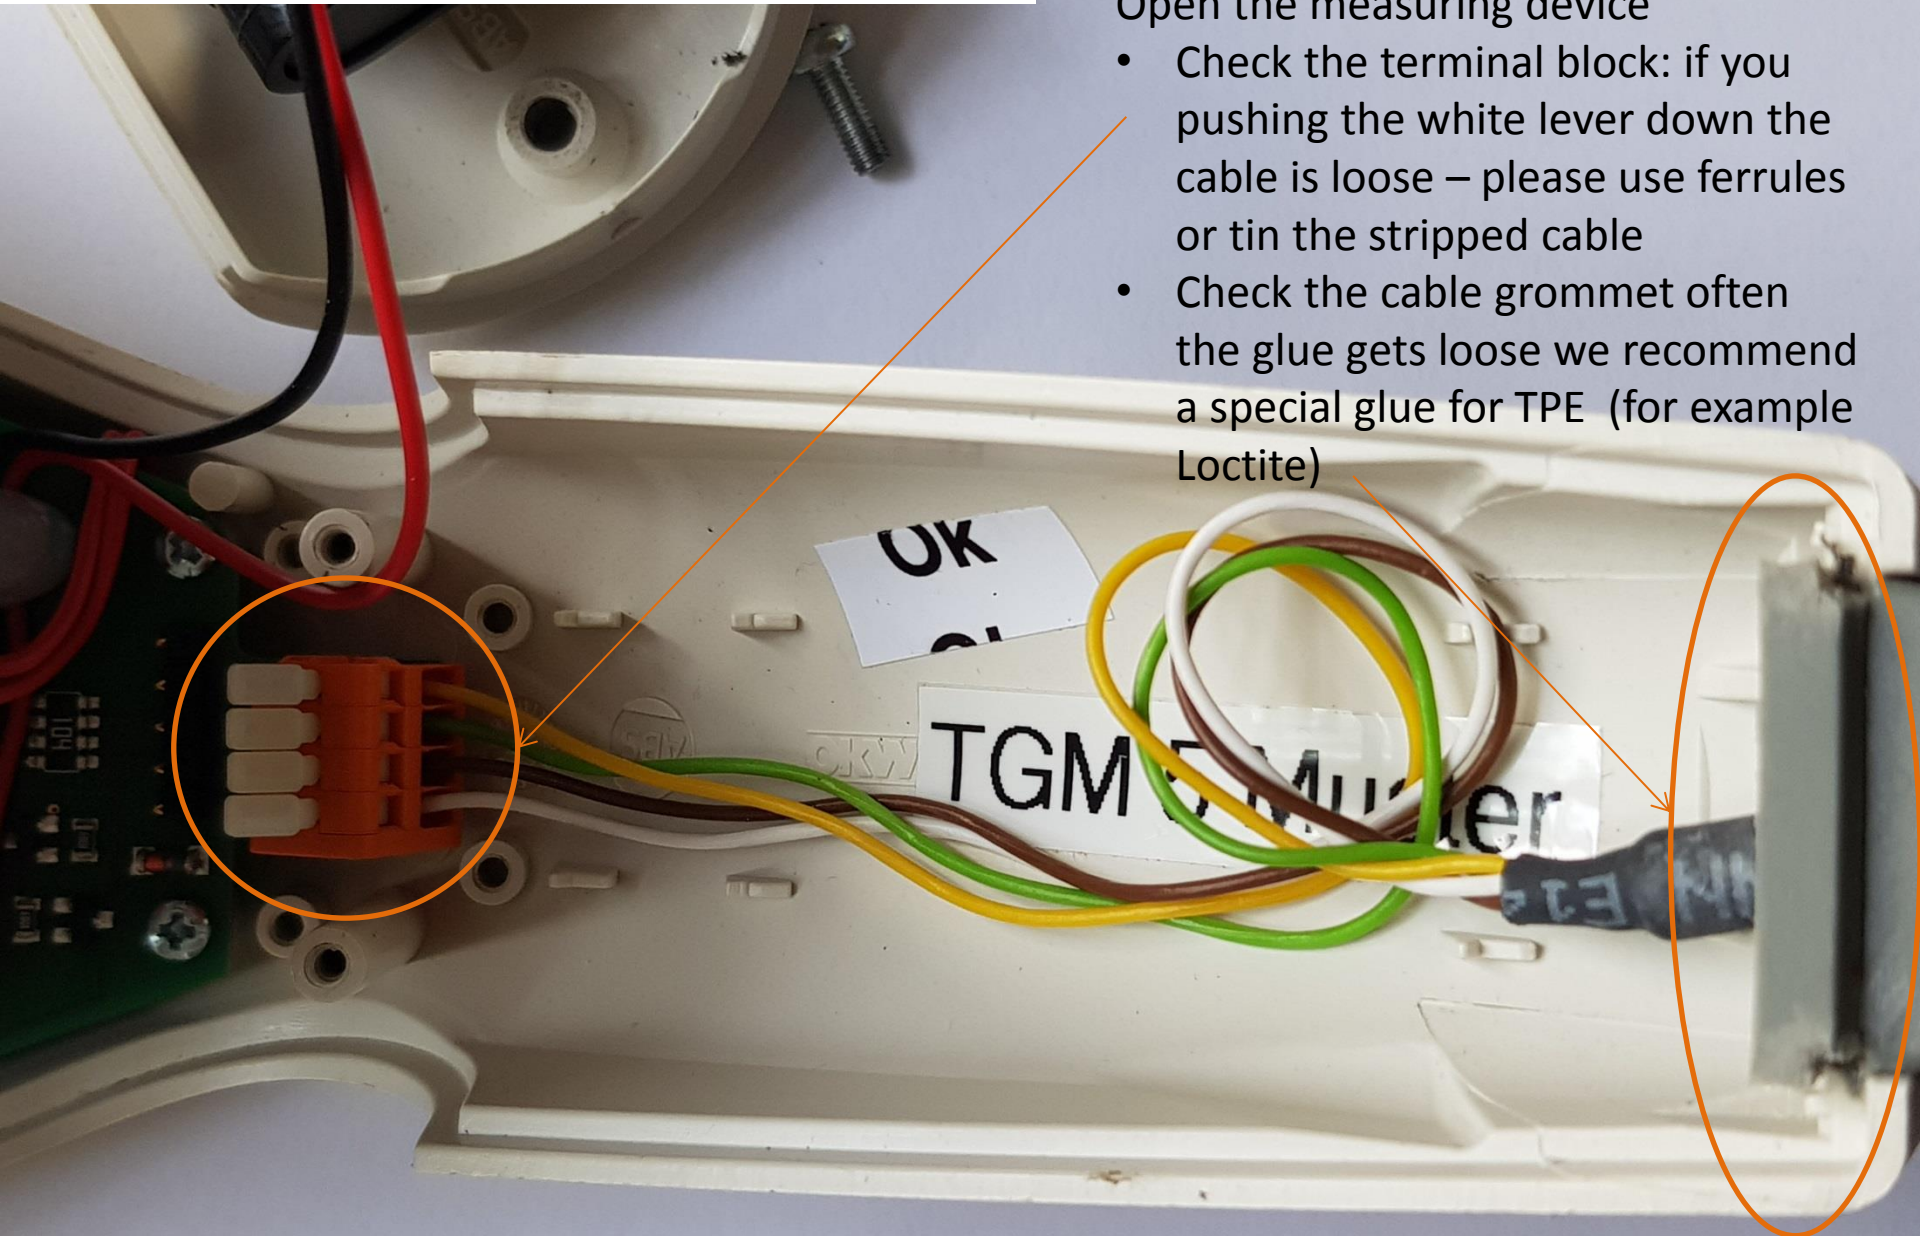

PLEASE DISCONNECT THE BATTERY IMMEDIATLY AFTER OPENING



Because of repeated problems with the cable grommet we changed it in early 2018 from glueing to clamping – please contact email@glasmacher-electronic.de so we can change for you in Germany or send you the metall clamp free of charge so you can change