

Battery check doorclosingmeter  
email@glasmacher-electronic.de



Test if TGM is working



Open the battery case  
by unscrewing



Check if battery/accu is connected properly to the battery clip




Check if any cable is damaged



Measuring Head


To open the Measuring  
Head unscrew the 4 screws



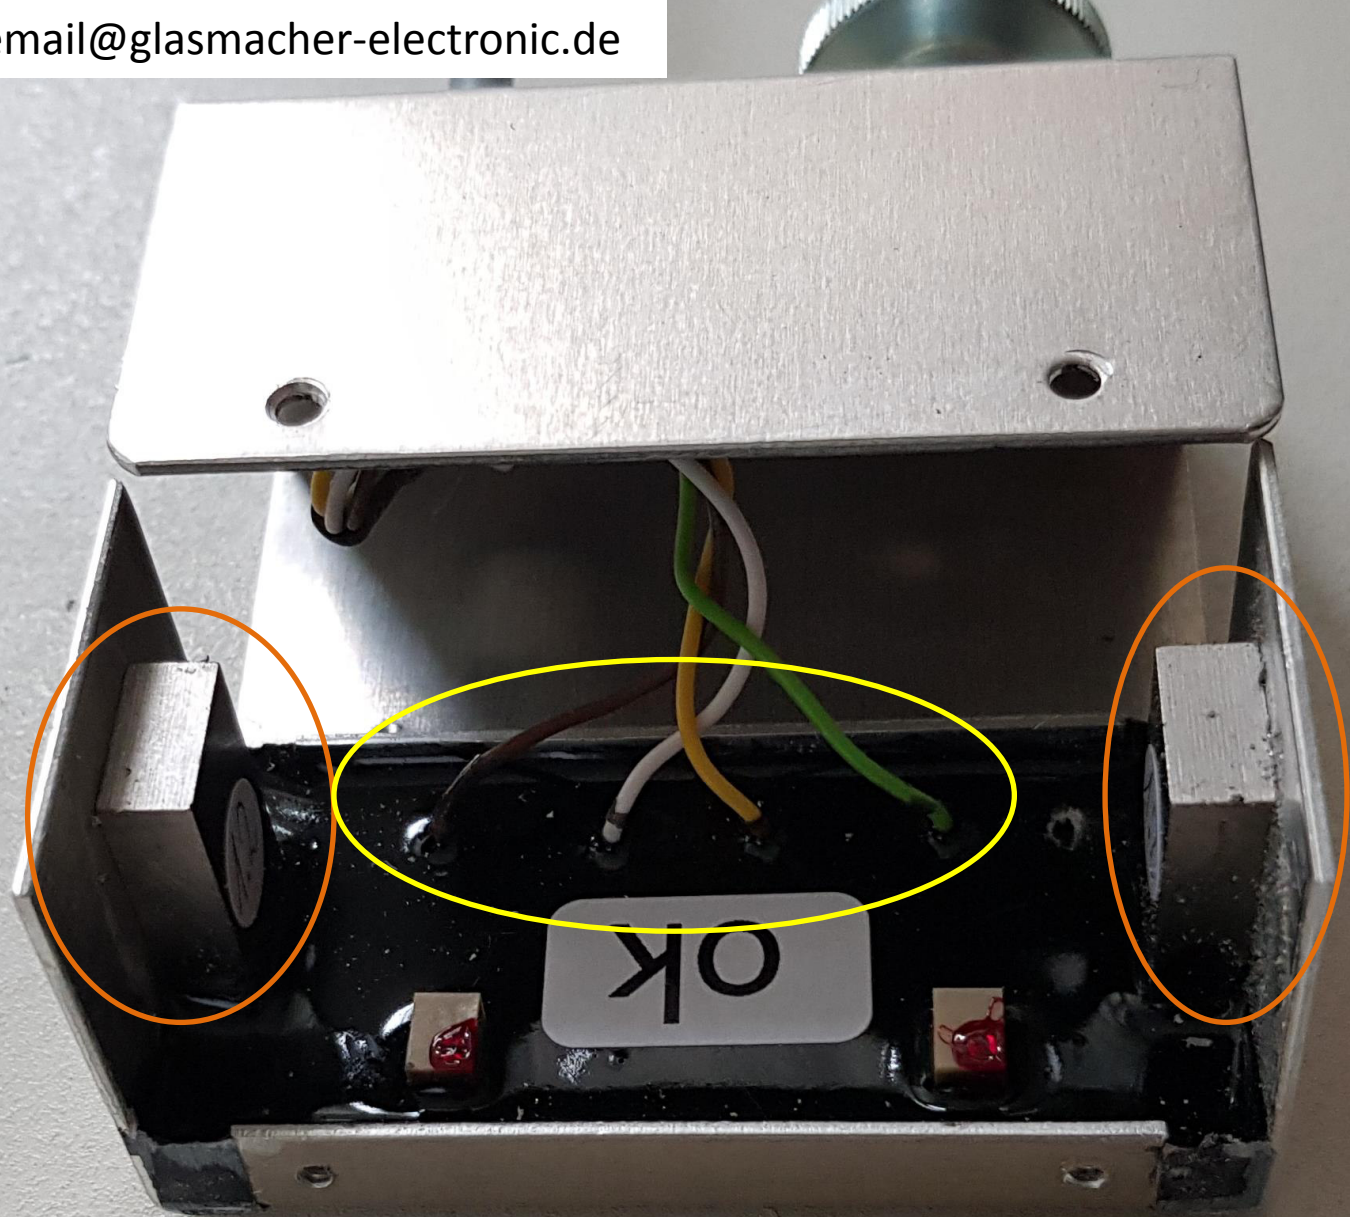

Check the **magnets** and the  
**Cable connections**



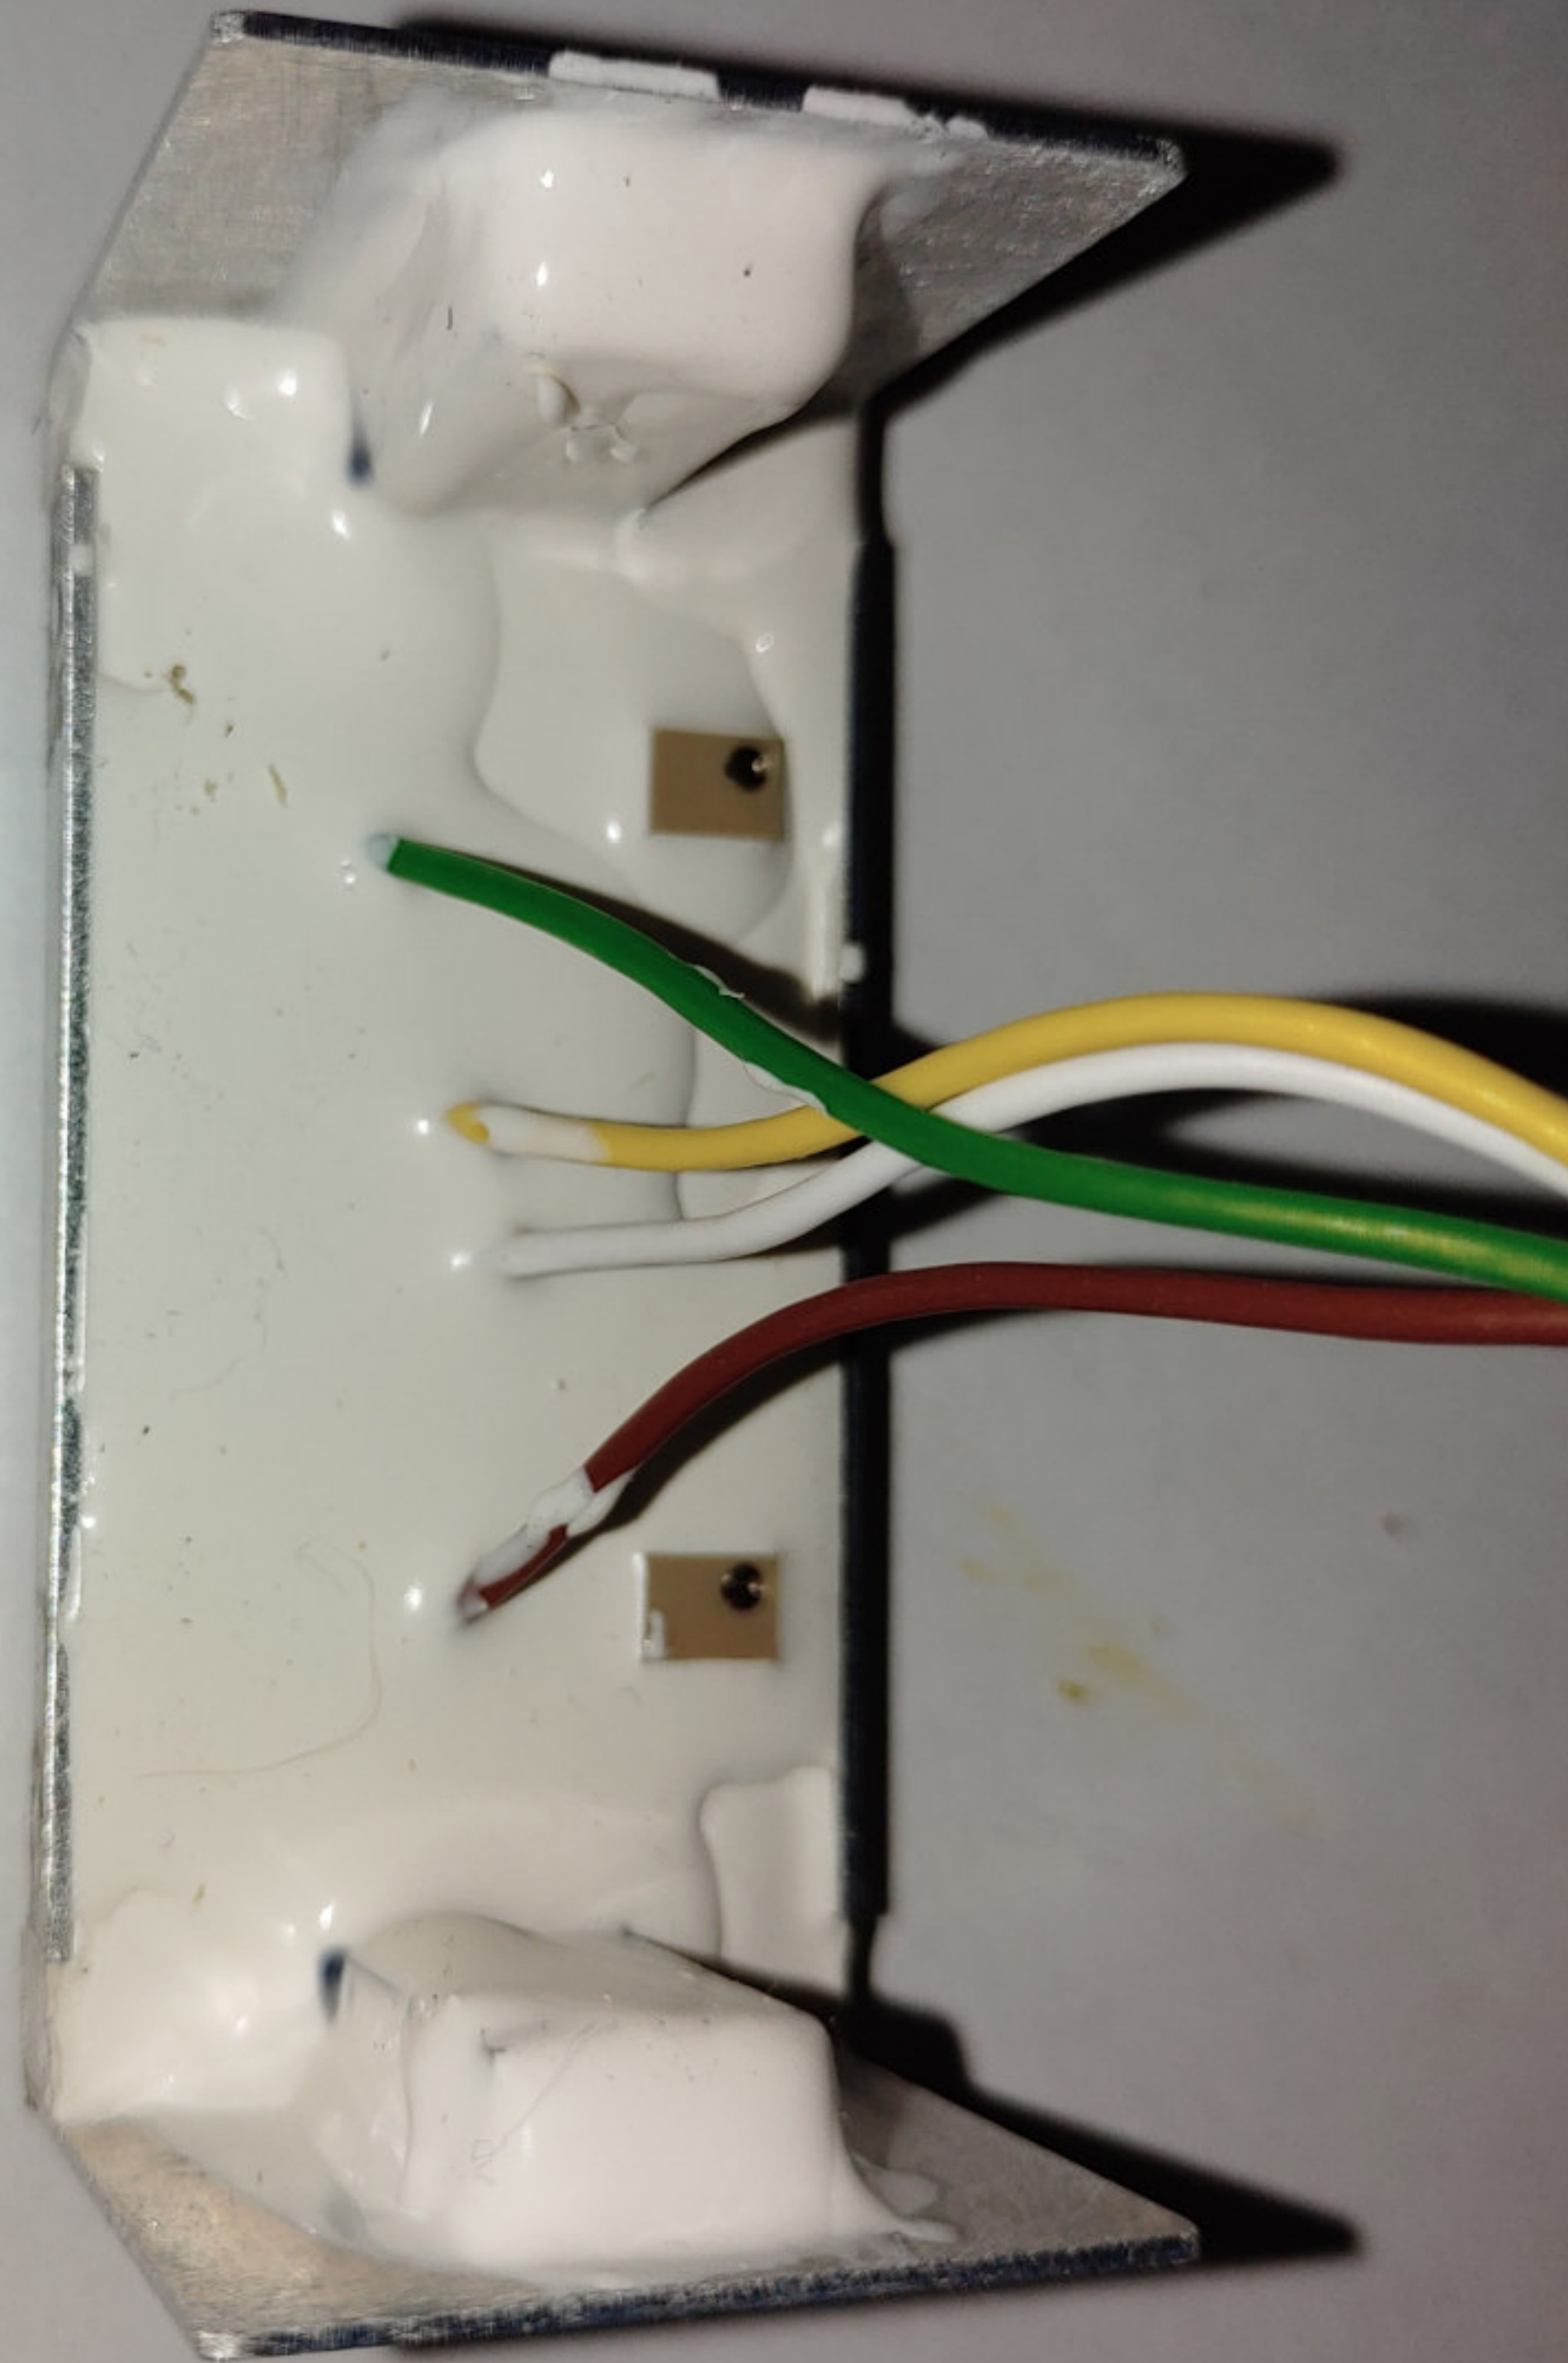

In newer devices the potting compound is white and we put a bit of the potting compound over the magnets