


Measuring Head

Where is the cable problem? Where is the cable loose?

Measuring device

Open the measuring device

- Check the terminal block: if you pushing the white lever down the cable is loose – please use ferrules or tin the stripped cable
- Check the cable grommet often the glue gets loose we recommend a special glue for TPE (for example Loctite)

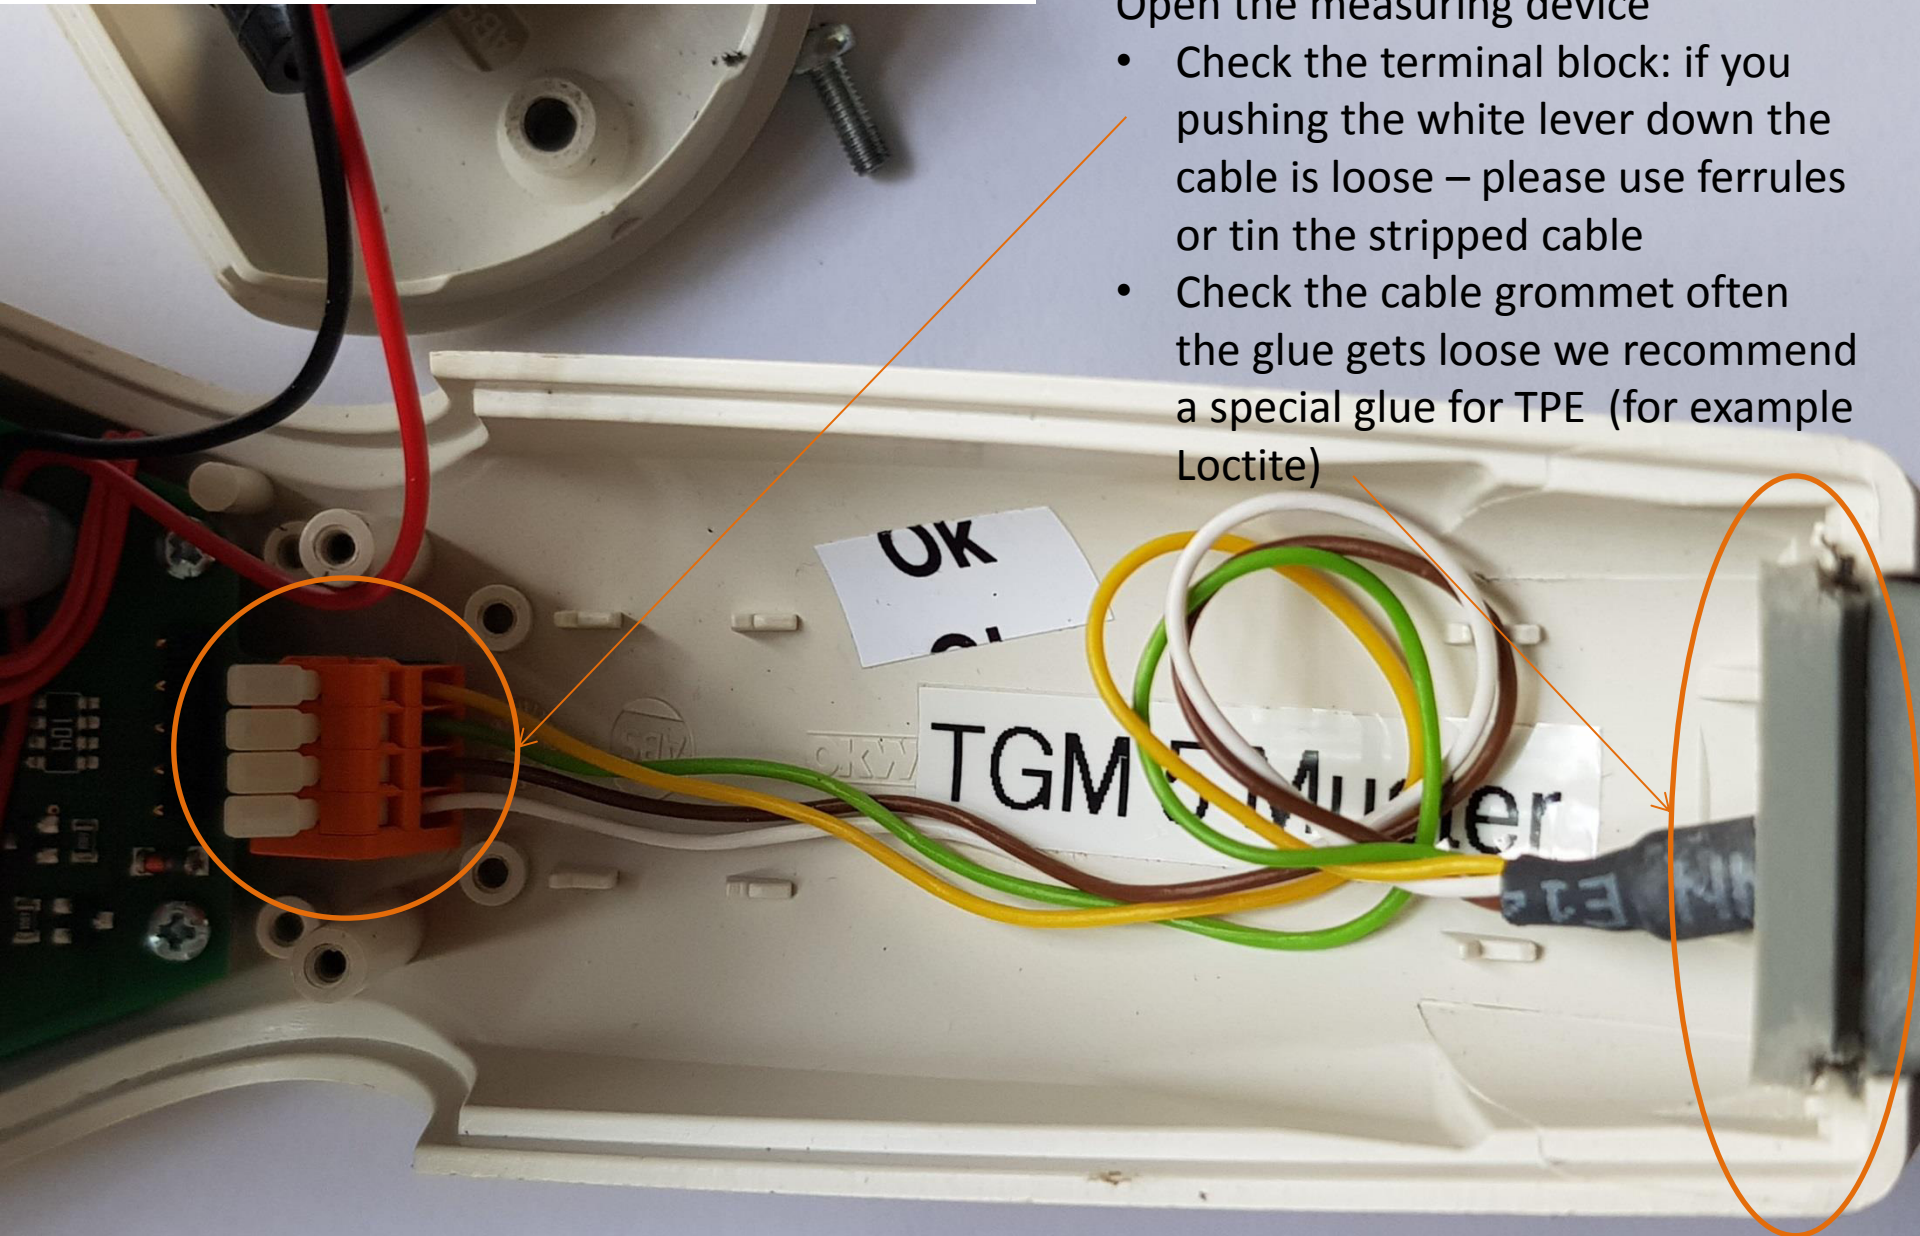

**PLEASE DISCONNECT THE BATTERY IMMEDIATLY AFTER OPENING**



Because of repeated problems with the cable grommet we changed it in early 2018 from glueing to clamping – please contact [email@glasmacher-electronic.de](mailto:email@glasmacher-electronic.de) so we can change for you in Germany or send you the metall clamp free of charge so you can change