

Using „TGM-USB-Excel.exe“

Free download:

[https://glasmacher-](https://glasmacher-electronic.com/de/TGMUSB.exe)

[electronic.com/de/TGMUSB.exe](https://glasmacher-electronic.com/de/TGMUSB.exe)

email@glasmacher-electronic.de



No USB Receiver connected to the PC


- Check the USB Ports
- Reconnect the USB Receiver
- Restart TGM-USB-Excel





USB Receiver connected to the PC

- USB Receiver is connected to the PC but no result is yet received
- Open your wished data logger program for example Excel
- Click on the table cell where the first result should be as if you want to type some data in this cell
- In this example cell B3

The „TGMUSB-EXCEL.exe“ Software inputs the result exactly like a keyboard input so if you click with the mouse cursor in some other tab or program the „TGMUSB-EXCEL.exe“ will try to write the results in this tab


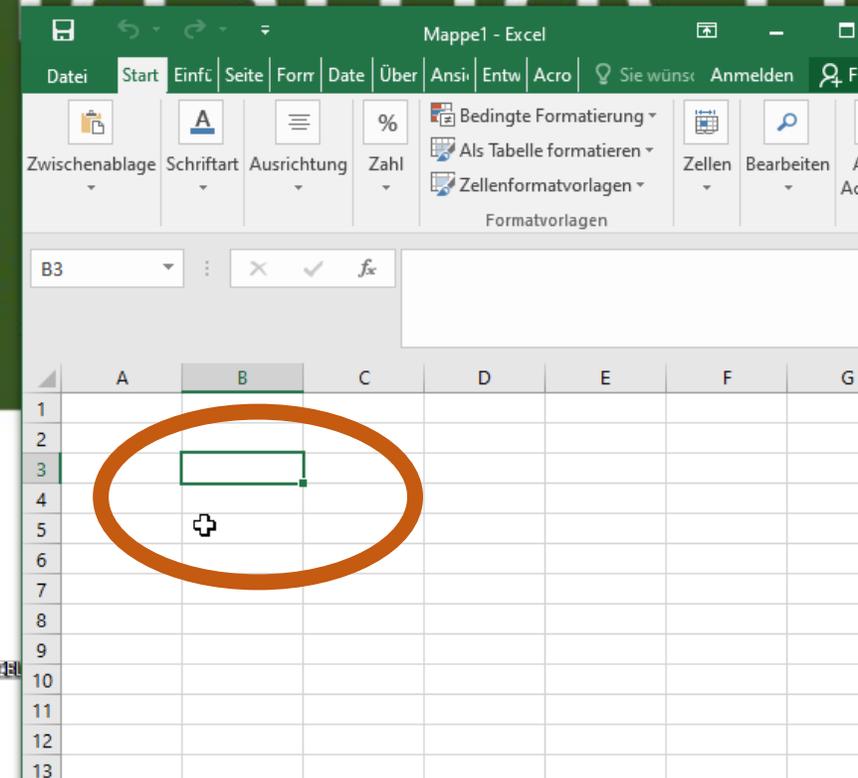


2. The received result is shown in the „TGMUSB-EXCEL.exe“ window

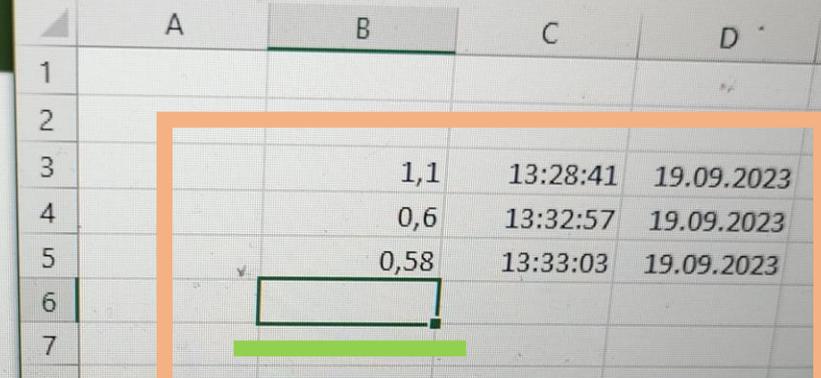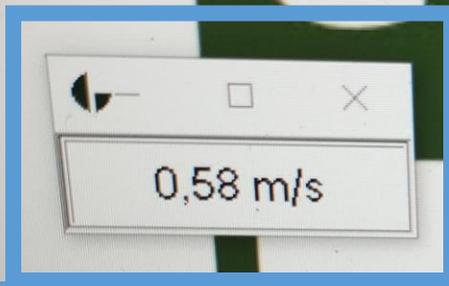

	A	B	C	D
1				
2				
3		1,1	13:28:41	19.09.2023
4		0,6	13:32:57	19.09.2023
5		0,58	13:33:03	19.09.2023
6				
7				

3. The result is written in the last clicked field. In this case in Excel starting in cell B5 the result – in C5 the Time and in D5 the Date

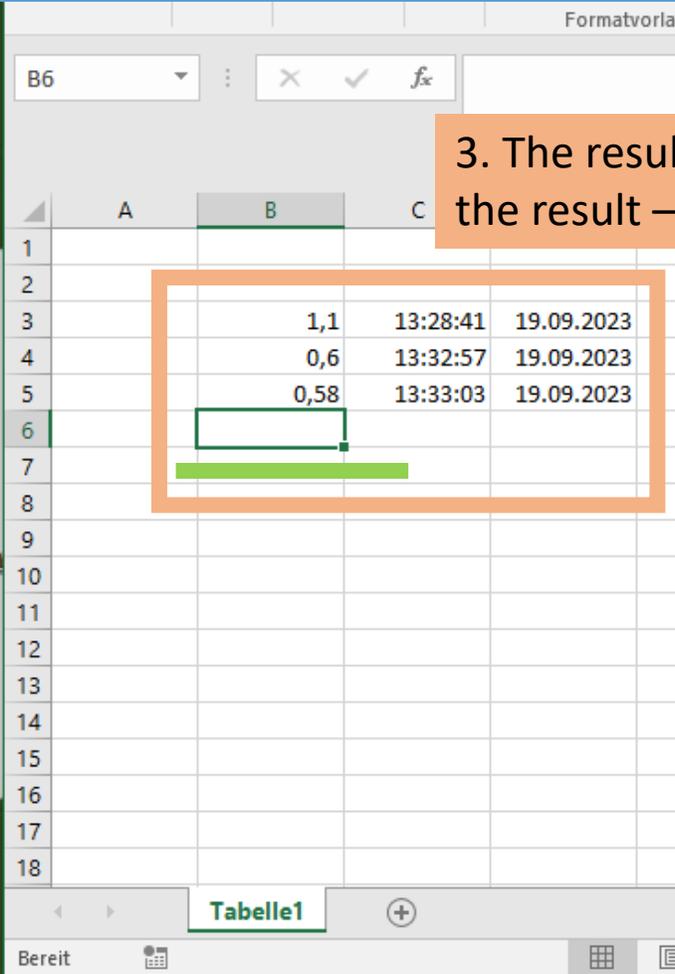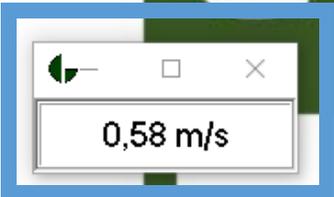

	A	B	C	D
1				
2				
3		1,1	13:28:41	19.09.2023
4		0,6	13:32:57	19.09.2023
5		0,58	13:33:03	19.09.2023
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				

4. After writing the result line the cursor jumps in the next line (CR/LF) in this case cell B6 see green edge and is ready for the next result



1. The measurement result from the TGMmini